

HOW TO MEASURE FOR REPLACEMENT WINDOWS

USE THIS FORM TO SEND ACCURATE WINDOW SIZES TO US FOR A COMPREHENSIVE QUOTE

THIS HANDY DOWNLOADABLE GUIDE CAN BE USED TO MEASURE:

Casement windows

Tilt & Turn windows

Flush sash windows

Sliding sash windows


Reversible windows

Timber effect windows

Frameless windows

Bay windows*

Bow windows*

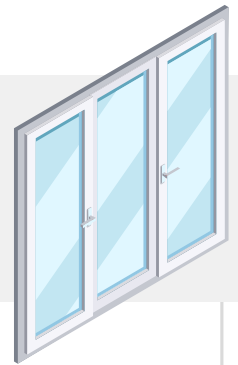

REMEMBER

Measurements must be in centimetres and millimetres, not feet and inches.

Due to the possibility of warped window frames, always take measurements from the outside of the building. *excluding bay or bow windows, further information below.

Note width and height measurements clearly.



YOU WILL NEED

- Metric tape measure (centimetres / millimetres)
- Notepad
- Pen/pencil
- Calculator
- Stepladder (if applicable)

HOW TO MEASURE FOR REPLACEMENT WINDOWS:

1. From the outside of the building, take height and width measurements from the brickwork opening around the window frame and from underneath any existing window sills or add-ons.
2. For the height, take at least 3 measurements from the top, middle and bottom of the window. Do the same for the width.
3. From these 6 measurements, calculate the final dimensions by subtracting 1cm (10mm) from the smallest height and width measurements.
4. For complete accuracy, double or even triple check your measurements.
5. Send your final 2 measurements to DW Windows.

PLEASE NOTE

For replacement bay or bow windows, the back-span width of the window will need to be measured from the inside of the property. Edge-to-edge from the existing frame, measure each window individually. The height should be measured from the exterior, as above.

Bay windows (angled): Account for two 70mm 90-degree corner posts by adding 140mm to the external height measurements.

Bow windows (curved): As well as measuring each window facet, measure the bow windows projection from the back-span to the interior point of the window frame.



No-one wants to be stuck with a window that doesn't fit!

Call the DW Windows team on **0800 999 0909**, email **headoffice@dwwindows.co.uk** or contact us online for further help and support.

Use the tables below to record your measurements:

1.	Room/Window	Width	Height	Final Measurements
		Top:	Top:	
		Middle:	Middle:	
		Bottom:	Bottom:	

2.	Room/Window	Width	Height	Final Measurements
		Top:	Top:	
		Middle:	Middle:	
		Bottom:	Bottom:	

3.	Room/Window	Width	Height	Final Measurements
		Top:	Top:	
		Middle:	Middle:	
		Bottom:	Bottom:	

4.	Room/Window	Width	Height	Final Measurements
		Top:	Top:	
		Middle:	Middle:	
		Bottom:	Bottom:	

5.	Room/Window	Width	Height	Final Measurements
		Top:	Top:	
		Middle:	Middle:	
		Bottom:	Bottom:	